# Plantronics M70<sup>™</sup>-M90<sup>™</sup> Series

User Guide

#### Contents

```
Welcome 3
What's in the box* 4
Select Language 5
Get paired 6
Headset Overview 7
Take Control 8
  Answer or end a call 8
  Decline a call 8
  Adjust the volume 8
  Mute on/Mute off
  Activate voice dial (phone feature) 8
  Know how to reconnect 8
  Change language 8
Adjust the fit 9
Charge 10
Save Power 11
Stay connected 12
More Features 13
  Use two phones 13
  Hear it Whisper 13
  Listen to music and more 13
```

#### Welcome

Congratulations on purchasing your new Plantronics product. This guide contains instructions for setting up and using your Plantronics  $M70^{TM}-M90^{TM}$  Series.

Please refer to the safety instructions for important product safety information prior to installation or use of the product.

# What's in the box\*

Headphones




Optional ear loop



**NOTE** \*Contents may vary by product.



# Select Language




Wearing your headset, power it on. The first time you do, you will be prompted to select your language from a set of three options. When completed, you will hear "pairing;" go to the "settings" menu on your phone to connect to your headset.

# Get paired

- Activate Bluetooth<sup>®</sup> on your phone and set it to search for new devices.
   iPhone\* Settings > Bluetooth > On


  - Android  $^{\text{™}}$  Smartphones\* Settings > Wireless & Networks > Bluetooth: On > Scan for devices
- 2 If necessary, enter four zeros (0000) for the passcode or accept the connection. Once successfully paired, the indicator light is stops flashing.

### Headset Overview

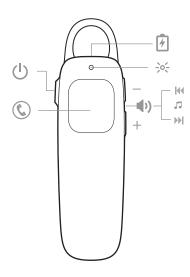

()	Power button
->-<-	Headset indicator light
	Call button
7	Charge port
<b>4</b> 1)	Volume button: Increases or decreases volume
Ą	Mute: Simultaneously press and hold the Volume up and Volume down button for 1-2 seconds
₩	Track forward
<b>K</b> €	Track backward

#### Take Control

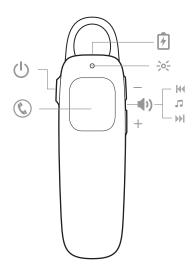

Answer or end a call

Tap the Call & button.

Decline a call

Press and hold the Call © button for 2 seconds.

Adjust the volume

Tap the Volume up (+) or down (–) button.

Mute on/Mute off

To mute the microphone, simultaneously press and hold the Volume up (+) and Volume down (–) buttons for 1-2 seconds. You will hear "mute on", this voice alert will be repeated once. After that an alert tone repeats every 15 minutes when mute is on. Press and hold buttons again to unmute the microphone.

Activate voice dial (phone feature)

Press the Call button  $\bigcirc$  for 2 seconds, wait for the phone prompt and then tell the phone to dial the name of a stored contact.

Know how to reconnect

If your headset loses the Bluetooth® connection with your phone, it will automatically try to reconnect.

If your headset can't reconnect, tap the Call button once or manually connect through the phone's Bluetooth's device menu.

If your headset remains out of range for more than 90 minutes, the  $\mathsf{DeepSleep}^{\$}$  mode will activate.


Change language

Reselect the headset language at any time by putting your headset into pair mode.


Press the Call button © until the indicator light flashes red and blue and you hear "pairing, please select a different language." You will once again select the headset from the devices menu to complete the pairing process.

# Adjust the fit

The universal-fit eartip has a thin loop that bends to gently tuck into the contours of either ear. To adjust the fit, you can rotate the eartip on the headset or add the optional clip-on earloop.

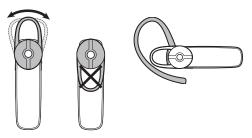


For the best voice pickup, always check that the headset points toward the corner of your mouth.



# Charge

Your new headset has enough power to pair and make a few calls. It takes 2 hours to fully charge the headset; the indicator light of turns off once charging is complete.



#### Save Power

If you leave your headset powered on but out of range of your paired phone for more than 90 minutes, your headset will conserve its battery power by entering into a DeepSleep® mode.

Once back in range with your phone, tap the Call button  $^{\textcircled{}}$  to exit DeepSleep mode. If your phone is also ringing, tap the Call button  $^{\textcircled{}}$  again to answer your call.

### Stay connected

Bluetooth has a working "range" of up to 33 feet (10 meters) between the phone and headset before audio degrades and the connection is lost. If you lose connection your headset will try to reconnect once you move back into range.

For best audio reception, keep your phone and headset on the same side of your body.

#### More Features

Use two phones Once you have paired your two phones, it's easy to answer calls from either phone.

When on a call, you will hear a ringtone notification of an incoming call from the second paired phone. To answer the second call, you must first end your current call (tap the Call © button) so new call automatically answers.

To pair a second phone or a new phone see "Change language" in the Take Control section.

Hear it Whisper Your headset tells you about status changes. For example:

"Power on"

"Pairing successful"

"Talk time (x) hours"

"Mute on"

"Incoming call"

"Answering call"

"Lost connection"

"Recharge headset"

Listen to music and more

If your phone also has the Bluetooth A2DP (Advanced Audio Distribution Profile) stereo music feature, your music, podcasts, navigation and other streaming audio can be heard through this headset.

#### Tracking

To skip tracks, press and hold the Volume up (+) or Volume down (–) button until the track skips forward or backward. To play/pause hold both sides of the Volume button at the same time.

#### **NEED MORE HELP?**

plantronics.com/support



Simply Smarter Communications™

Plantronics, Inc. Plantronics BV

345 Encinal Street South Point Building C

Santa Cruz, CA 95060 Scorpius 140

United States 2132 LR Hoofddorp, Netherlands

© 2014 Plantronics, Inc. All Rights Reserved. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics is under license. All other trademarks are the property of their respective owners.

Patents US 5,712,453; D691,120; CN ZL201230385670.1; EM 002087288-0004; TW D155552; Patents Pending 202298-06 (07.14)

